




Before power connection, be sure that bracket and the TV installed correctly.
Keep the children away from power.

Please don't use the product outside the temperature range: - 5°C ~ 40°C.

Please stop for 4 minutes when continually operating for 30 seconds.

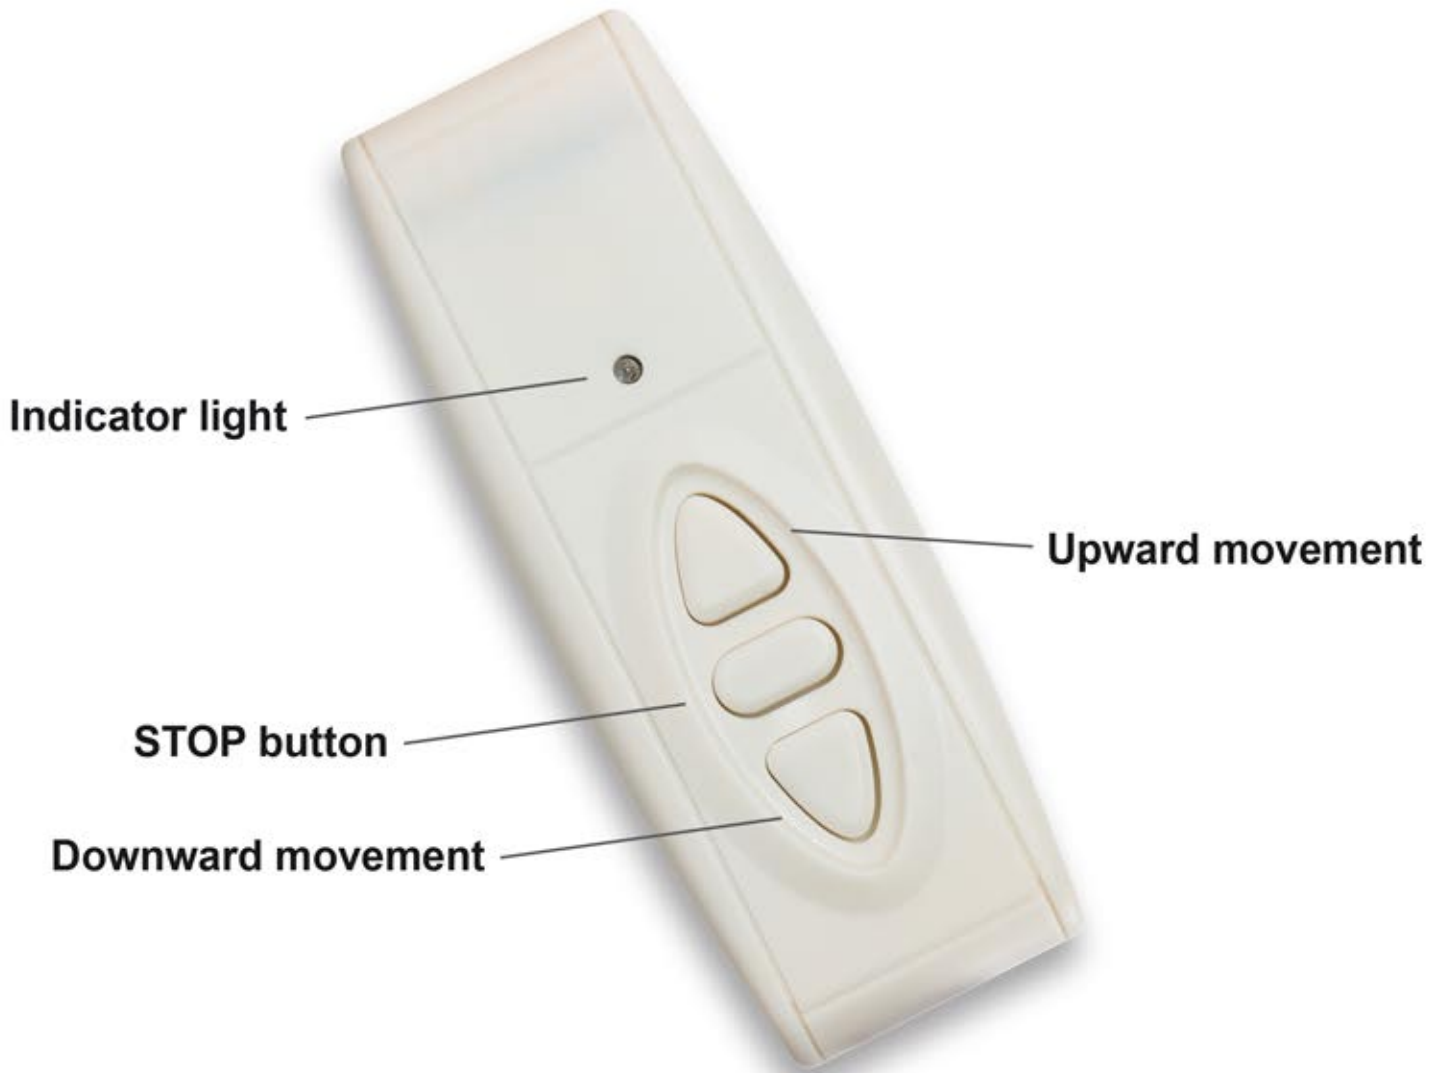

UPWARD MOVEMENT

Press the **UP** button to lift the TV, it can be stopped by pressing **STOP** or **DOWN** button during the process.

DOWNWARD MOVEMENT

Press the **DOWN** button to lower the TV, it can be stopped by pressing **STOP** or **UP** button during the process.

Note

If the mount stopped at the HIGHEST / LOWEST position for less than 5 minutes, please press the **DOWN / UP** button twice to reactivate the height adjustment mode. Otherwise, please press once to activate.