



HP 63-2 AL

GUIDEBOOK


of Tuya App

- The guidebook is for illustration purpose only and the latest App may vary.
- Download the Tuya Smart App from App Store or Google Play.
- Wi-Fi Standard: IEEE 802.11b/g/n Operation frequency: 2.400~2.4835GHz RF output power: 20dBm Max

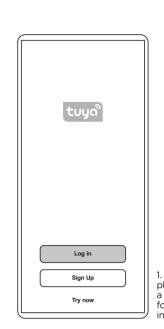

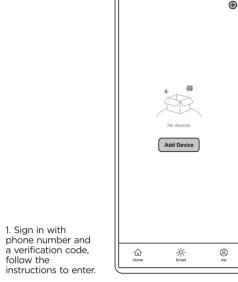



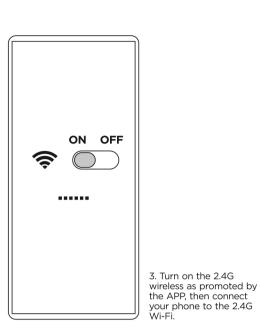







13. Choose the Home you just created





added after 10 to 60 seconds. The unit will emit a beep indicating



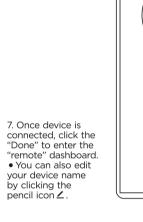


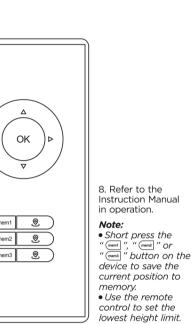


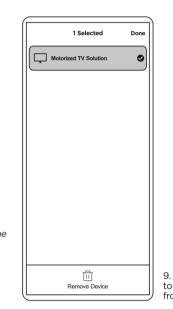


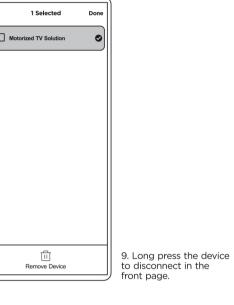


tuya

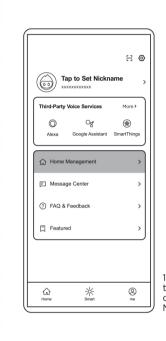

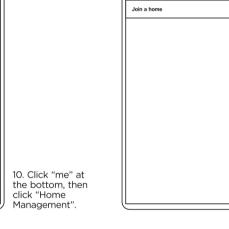

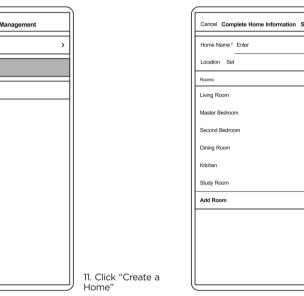

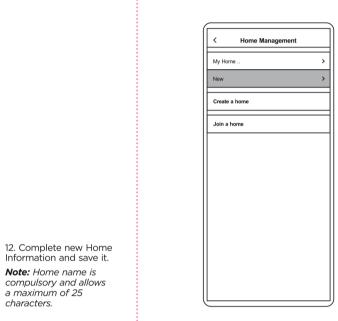



password and click

14. Choose "Add Member" to add other users into a Home. The user will receive a notification on the app and be able to control the device after they accept the invitation.

Note: One device is not able to be connected by multiple users except for Home Management Function. Former user needs to disconnect the device on the app (or short press Remote " [mm] " new user connects.

Control via Amazon Alexa




1. First download the Amazon Alexa app from the App Store or Google Play. Once installed, return to the Tuya app, click on "me" in the bottom right corner and click the "Alexa".







3. Click "LINK" to begin the linking

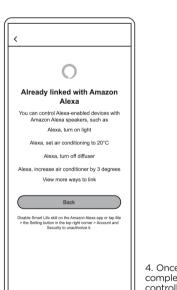


4. Once the linking is complete, you can start controlling the TV mount via Amazon Alexa.

Amazon Alexa Voice Control (only supports English and German)


Set language to either German or English (United States), not lanuage combination German / Englisch.


Commands	English Voice Commands	German Voice Commands
Upward Movement	Alexa, set <devicename> to up</devicename>	Alexa, stelle <devicename> auf hoch.</devicename>
Downward Movement	Alexa, set <devicename> to down.</devicename>	Alexa, stelle <devicename> auf runter.</devicename>
Stop	Alexa, set <devicename> to stop.</devicename>	Alexa, stelle <devicename> auf stop.</devicename>
Save Current Position Memory 1	Alexa, set <devicename> to Memory one.</devicename>	Alexa, stelle <devicename> auf Memory eins.</devicename>
Save Current Position as Memory 2	Alexa, set <devicename> to Memory two.</devicename>	Alexa, stelle <devicename> auf Memory zwei.</devicename>
Save Current Position as Memory 3	Alexa, set <devicename> to Memory three.</devicename>	Alexa, stelle <devicename> auf Memory drei.</devicename>
Move to Memory Position 1	Alexa, set <devicename> to Position one.</devicename>	Alexa, stelle <devicename> auf Position eins.</devicename>
Move to Memory Position 2	Alexa, set <devicename> to Position two.</devicename>	Alexa, stelle <devicename> auf Position zwei.</devicename>
Move to Memory Position 3	Alexa, set <devicename> to Position three.</devicename>	Alexa, stelle <devicename> auf Position drei.</devicename>
Move to Initial Position	Alexa, set <devicename> to Home.</devicename>	Alexa, stelle <devicename> auf Home.</devicename>


Control via Google Home

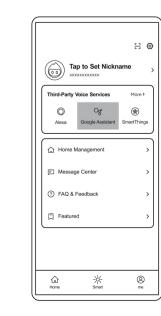

1. First download the Google Home app from the App Store or Google Play. Once installed, return to the Tuya app, click on "me" in the bottom right corner and click the "Google Assistant".

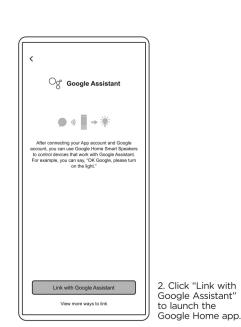

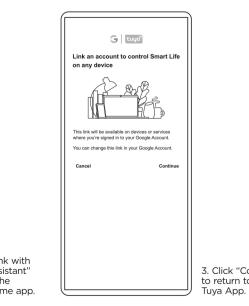

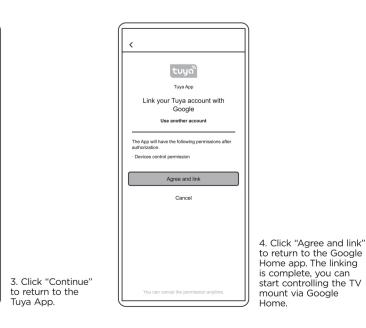

Voice Control (only supports English and German) Set language to either German or English (United States), not language combination German / Englisch.

Google Home

Commands	English Voice Commands	German Voice Commands
Upward Movement	OK Google, set <devicename> to up</devicename>	OK Google, stelle <devicename> auf hoch.</devicename>
Downward Movement	OK Google, set <devicename> to down.</devicename>	OK Google, stelle <devicename> auf runter.</devicename>
Stop	OK Google, set <devicename> to stop.</devicename>	OK Google, stelle <devicename> auf stop.</devicename>
Save Current Position Memory 1	OK Google, set <devicename> to Memory one.</devicename>	OK Google, stelle <devicename> auf Memory eins.</devicename>
Save Current Position as Memory 2	OK Google, set <devicename> to Memory two.</devicename>	OK Google, stelle <devicename> auf Memory zwei.</devicename>
Save Current Position as Memory 3	OK Google, set <devicename> to Memory three.</devicename>	OK Google, stelle <devicename>auf Memory drei.</devicename>
Move to Memory Position 1	OK Google, set <devicename> to Position one.</devicename>	OK Google, stelle <devicename> auf Position eins.</devicename>
Move to Memory Position 2	OK Google, set <devicename> to Position two.</devicename>	OK Google, stelle <devicename> auf Position zwei.</devicename>
Move to Memory Position 3	OK Google, set <devicename> to Position three.</devicename>	OK Google, stelle <devicename> auf Position drei.</devicename>
Move to Initial Position	OK Google, set <devicename> to Home.</devicename>	OK Google, stelle <devicename> auf Home.</devicename>