




Before power connection, be sure that bracket and the TV installed correctly.

Keep the children away from power.

OK : Stop Button

OK + **SET** : Learning Button

HP 29 L

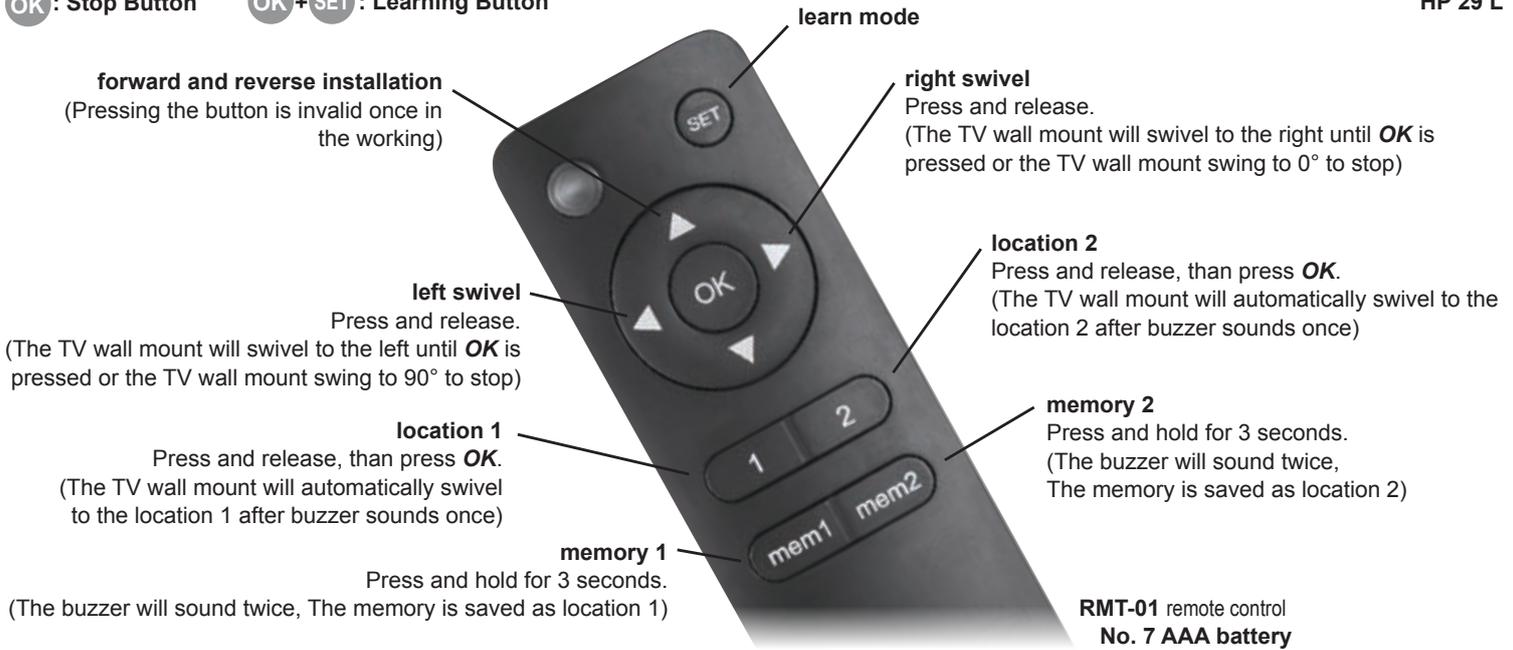

Remote control operation instruction

1. When powered, the buzzer sounds once beep. TV wall mount will be in standby state.
2. **Forward and reverse installation choices.** **NOTE:** There are forward and reverse installation for the TV wall mount. Swinging the TV wall mount to right against the wall that defaults to the forward installation. **If it is the forward installation, the Step 2 is not required.** If it is the reverse installation, press and hold **FORWARD AND REVERSE** for 5 seconds until the buzzer sounds twice. Remote control is now successfully set.
3. Press **OK** to return the TV wall mount flat against the wall and hear one beep from the buzzer, the system will then enter a working condition.

LEARN MODE operation instructions

The loss of matched remote control would result in TV wall mount being unusable. The learn mode is used to learn how to use TV remote (Only suitable for the TV remote of popular brands.) to control TV wall mount.

NOTE:

- TV remote can't replace the all functions of matched remote control. Only learning the 3 buttons functions. **LEFT SWIVEL, RIGHT SWIVEL, and OK.**
- The user must follow the rules below when using the TV remote to control TV wall mount.
- Select the alternate buttons from the TV remote, and the button that can't direct control the TV.
- If you need to erase all the button functions **LEARNED**, press and hold **1** for 3 seconds and repeat five times. If you don't erase them, the new button functions **LEARNED** every time will overwrite the last button functions **LEARNED**.

LEARN MODE instructions as shown below

1. Press and hold **SET** for 3 seconds until LED light on the matched remote control stays on, than press **OK**. The buzzer will sound once, the red LED light on the IR receiver will stay on, then the learn mode will be entered.
2. If learn **LEFT SWIVEL**, please press **LEFT SWIVEL** on the matched remote control until the buzzer sounds twice. The red LED light on the IR receiver will change from being steady to a slow flash.
3. Aim the TV remote at the IR receiver, and press the button on the TV remote that you need to set as the function of **LEFT SWIVEL** until the buzzer sounds three times. The red LED light on the IR receiver will change from slow flash to a fast flash
4. Press **OK** on the matched remote control until the buzzer sounds four times. The red LED light on the IR receiver will turn off. **LEFT SWIVEL** button will be learned successfully. If the buzzer only sounds once, then a learn failure. (The TV remote won't support the learning function). (Please follow step 1 through step 4 in turn if the user need to **LEARN** more buttons)

Learn „Power“ button on the TV remote:

Press and hold **SET** for 3 seconds until LED light on the matched remote control stays on, and then press **OK**. The buzzer will sound once, the red LED light on the IR receiver will stay on, then press and hold **LOCATION 1** button on the matched remote control until the buzzer sounds twice, then release the **LOCATION 1** button. The red LED light on the IR receiver will change from being steady to a slow flash. Aim the TV remote at the IR receiver, and press **Power** button. The buzzer will sound three times. The red LED light on the IR receiver will change from slow flash to a fast flash. Press **OK** Button on the matched remote control until the buzzer sounds four times. The red LED light on the IR receiver will turn off. **Power** button will be Learned successfully. If press **power** button, the TV wall mount will automatically reset.

NOTE: When there is no activity for over 20 seconds in any step, TV remote will automatically exit from the learn mode.

Reset mode:

1. Restart the power.
2. Press and hold **LOCATION 1** for 3 seconds and repeat three times. The system will start automatic positioning: First TV wall mount with flat against the wall, then TV wall mount with 90° of lateral rotation until the TV wall mount automatically stop at 90° position.




**Stellen Sie sicher dass Halterung und TV richtig montiert sind, bevor Sie den Strom anschließen.
Halten Sie Kinder vom Stromanschluss fern!**

OK : Stoptaste

OK + SET : Lerntaste

HP 29 L

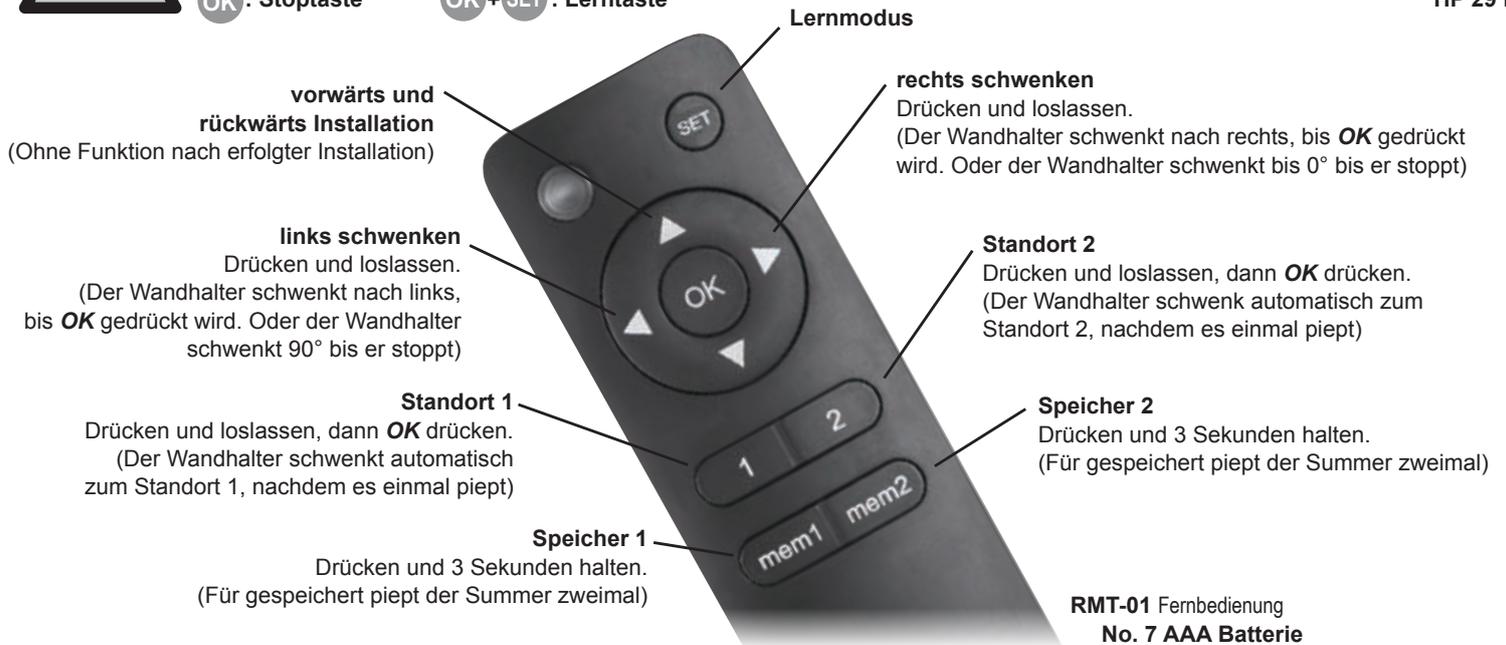

Fernbedienung Betriebsanweisung

1. Beim einschalten der Stromversorgung piept der Summer einmal. Der Wandhalter ist im Standby-Modus.
2. Vorwärts- und Rückwärts Installationsoption. **HINWEIS:** Schwenken Sie die TV-Halterung nach rechts gegen die Wand, für die standardmäßige Vorwärtsinstallation. **Bei der Vorwärts Installation ist Schritt 2 nicht nötig.** Wenn Sie die umgekehrte Installation gewählt haben, drücken und halten Sie **VORWÄRTS UND RÜCKWÄRTS** für 5 Sekunden bis der Piepton zweimal ertönt. Die Fernbedienung ist nun richtig eingestellt.
3. Drücken Sie **OK** damit der Wandhalter zurück fährt und flach an der Wand liegt. Wenn ein Piepton ertönt ist der Wandhalter im arbeitsbereiten Zustand.

LERNMODUS Betriebsanweisung

Der Verlust der Original Fernbedienung macht den Wandhalter unbrauchbar. Der Lernmodus wird benötigt damit die TV Fernbedienung programmiert wird den Wandhalter zu steuern. (Nur möglich für bekannte Marken)

HINWEIS:

- Die Fernbedienung kann nicht alle Funktionen der Original Fernbedienung ersetzen. Nur **LINKS SCHWENKEN, RECHTS SCHWENKEN, und OK.**
- Bitte befolgen Sie die untenstehenden Regeln um mit der TV Fernbedienung den Wandhalter zu steuern.
- Wählen Sie Tasten von der TV Fernbedienung, die nicht direkt für die Steuerung des TV Gerätes verwendet werden.
- Wenn Sie alle Tastenfunktionen löschen möchten, drücken und halten Sie **STANDORT 1** für 3 Sekunden und wiederholen es 5 mal. Wenn Sie die Tastenfunktionen nicht löschen, werden die neuen Tastenfunktionen jedes Mal die letzten überschreiben.

LERNMODUS Betriebsanweisung wie nachstehend aufgeführt

1. 3 Sekunden **SET** drücken und halten bis das LED Licht auf der Fernbedienung leuchtet, dann **OK** drücken. Der Summer piept einmal. Das rote LED Licht auf dem IR-Empfänger leuchtet und Sie befinden sich im LERNMODUS.
2. Wenn Sie **LINKS SCHWENKEN** programmieren möchten, drücken Sie **LINKS SCHWENKEN** auf der Fernbedienung bis der Summer zweimal klingelt. Das rote LED Licht auf dem IR-Empfänger wechselt von leuchtend auf langsam blinkend.
3. Richten Sie die TV Fernbedienung auf den IR-Empfänger und drücken Sie die Taste, welche Sie als Funktion **LINKS SCHWENKEN** ausgesucht haben, bis der Summer dreimal klingelt. Das rote LED Licht auf dem IR-Empfänger wechselt von langsam auf schnell blinkend.
4. Drücken Sie auf der Fernbedienung auf **OK** bis der Summer viermal piept. Das rote LED Licht auf dem IR-Empfänger geht aus. Die Taste wurde erfolgreich programmiert und gespeichert. Wenn es nur einmal piept ist die Programmierung fehlgeschlagen. (Die TV Fernbedienung ist nicht für die Lernfunktion geeignet).
(Bitte befolgen Sie Schritt 1 bis 4, wenn Sie noch mehr Tasten programmieren möchten)

„Power“ Knopf auf der Fernbedienung programmieren:

Drücken und halten Sie **SET** für 3 Sekunden bis das LED Licht auf der Fernbedienung leuchtet und dann drücken Sie **OK**. Wenn der Summer einmal piept und das rote LED Licht auf dem IR-Empfänger leuchtet, drücken und halten Sie **STANDORT 1** bis der Summer zweimal piept, dann können Sie loslassen. Das rote LED Licht auf dem IR-Empfänger wechselt von leuchtend auf langsam blinkend. Richten Sie die TV Fernbedienung auf dem IR-Empfänger und drücken Sie die **Power** Taste. Der Summer piept dreimal. Das rote LED Licht auf dem IR-Empfänger wechselt von langsam auf schnell blinkend. Drücken Sie **OK** bis der Summer viermal piept. Das rote LED Licht auf dem IR-Empfänger geht aus. Die Taste wurde erfolgreich programmiert und gespeichert. Wenn Sie die **POWER** Taste drücken wird die TV-Wandhalterung automatisch zurückgesetzt.

HINWEIS: Wenn es mehr als 20 Sekunden keine Aktivität gibt wird der Lernmodus beendet.

Reset-Modus:

1. Starten Sie die Stromversorgung neu.
2. Drücken und halten Sie **STANDORT 1** für 3 Sekunden und wiederholen es 3 mal. Das System startet die automatische Positionierung: Zuerst fährt der Wandhalter flach an die Wand, dann dreht sich der Wandhalter seitlich um 90° bis die TV-Positionierung automatisch bei 90° stoppt.)